

## USB HALL PROBES



HU-PT1-164005

### • Description

Magnet-Physik USB Hall probes allow reading the magnetic field strength or flux density directly into a computer, without need of an additional measuring instrument. They are connected to a USB port. Easy-to-use data acquisition and display software is included on CD. It allows acquiring single data readings or logging multiple readings into lists or data files. The user can also integrate the probes into his own software projects. Programming examples are available.

Key features:


- Automatic or manual range selection
- Linearity correction
- Temperature correction ("professional" probes only)
- Adjustable filter function (moving average)
- Adjustable sampling rate
- Automatic probe zeroing
- No driver installation required

### • Applications

USB Hall probes can for example be applied in the following areas:

- Quality control of permanent magnets
- Quality control of soft magnetic components
- Quality control of magnet systems (motors, loudspeakers, magnetic clamps, couplings etc.)
- Materials research
- Development of magnet systems
- Magnet testing
- Magnet sorting
- Material analysis
- Automated testing
- Process control

### • Gauss-/Teslameter Software

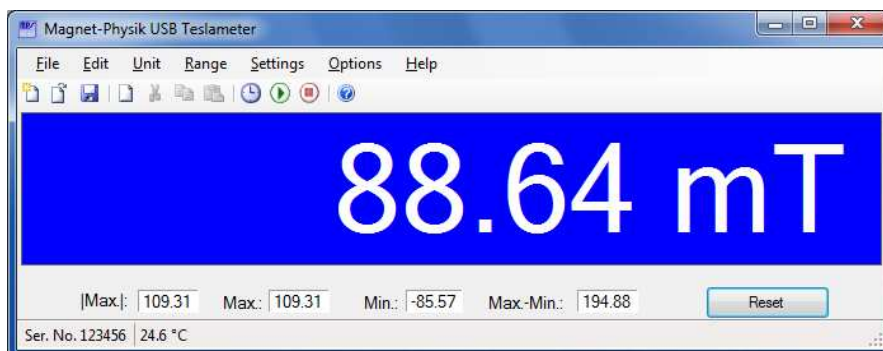

- Units: T, G, A/m, A/cm, Oe
- Data acquisition timer
- Set ranges or auto range
- Collect data in a table
- Save data to text files
- Copy and paste data
- Log data to files
- Capture max. and min.
- Zero probe
- Set filter
- Set sampling rate



## • Designs

The probes are offered in two designs: "standard" and "professional". Please refer to the following table for the specific features.

## • Properties

Design	Standard		Professional	
Model	<b>HU-ST1-184605</b>		<b>HU-PT1-164005</b>	
Orientation	transverse		transverse	
Thickness	1.8 mm max.		1.6 mm max.	
Diameter	-		-	
Width	4.6 mm		4.0 mm	
Length	55 mm			
Cable length	approx. 2 m			
Probe surface	Heat-shrink tubing		Fiberglass	
Units	T (Tesla), G (Gauss), A/m, A/cm, Oe (Oersted)			
Usable resolution	0.01 mT / 0.1 G / 0.01 kA/m / 0.1 A/cm / 0.1 Oe			
- without filter, approx.	0.001 mT / 0.01 G / 0.001 kA/m / 0.01 A/cm / 0.01 Oe			
- with filter, approx.				
Maximum reading	2 T / 20 kG / 1.6 MA/m / 16 kA/cm / 20 kOe		5 T / 50 kG / 4 MA/m / 40 kA/cm / 50 kOe	
Basic accuracy	2 %		0.5 % up to 1.5 T 1 % up to 3T	
Temperature correction and temperature display	no		yes	
Temperature coefficient of sensitivity	approx. -0.04 %/°C		± 0.02 %/°C max.	
Active area	0.3 mm nominal diameter			
Data acquisition rate	adjustable, approx. 4 to 500 readings per second			
Frequency range	DC			
Operating temperature range	0 °C to 75 °C			
Supported operating systems	Microsoft Windows 2000, XP, Vista, 7			
Power supply	from USB			

Due to continuous product improvements specifications are subject to change without notice.

## • Package Content

The probes are supplied in a storage case including a CD. The CD contains the data acquisition program *USB Teslometer*, operating instructions and help in English and German languages, as well as programming examples in Visual C# and Visual Basic.NET.

Standard probes (ST) are supplied with a calibration confirmation without measured values. A full proprietary or DKD calibration certificate is available for an extra charge.

Professional probes (PT) are supplied with a proprietary calibration certificate. A DKD calibration certificate is available for an extra charge.

## • Accessory (not included in package)

Magnetic shielding chambers: see datasheet *NK Shielding Chambers*

### MAGNET-PHYSIK Dr. Steingroever GmbH

Emil-Hoffmann-Straße 3, D-50996 Köln  
Phone : +49 / (0)2236 / 3919-0 • Fax: +49 / (0)2236 / 3919-19  
e-mail: [info@magnet-physik.de](mailto:info@magnet-physik.de)  
Website: [www.magnet-physik.de](http://www.magnet-physik.de)

### MAGNET-PHYSICS Inc.

9001 Technology Drive Suite C-2, Fishers, IN 46038, USA  
Phone: +1 317 577 8700 • Fax: +1 317 578 2510  
e-mail: [info@magnet-physics.com](mailto:info@magnet-physics.com)  
Website: [www.magnet-physics.com](http://www.magnet-physics.com)